

A large, black, stylized logo of a sail or feather with a registered trademark symbol (®) to its upper right.

REDSAIL

REDSAIL CUTTING PLOTTERS


C series

**RS360C, RS450C, RS500C, RS720C, RS800C,
RS1120C, RS1360C, RS1600C, RS1780C, RS2000C**

User Manual For Cutmate 3.0 Software



1. Thank you for choosing Cutamte3.0 software. First, please click REGISTER in the upper right corner of our website <https://cutmate.net> to complete account registration, enter your name, valid email address (you can receive emails normally), select your location and set a login password.

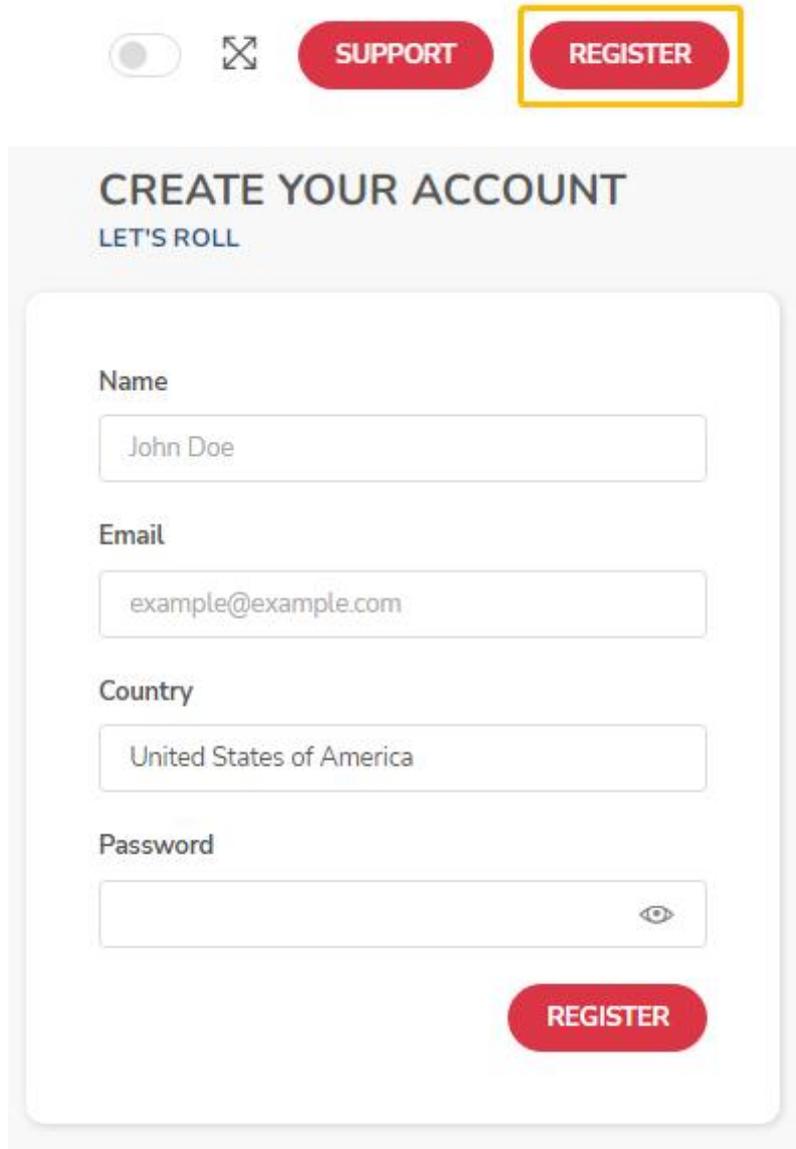


The image shows a registration form titled "CREATE YOUR ACCOUNT" with the subtitle "LET'S ROLL". The form contains the following fields:

- Name:** Input field containing "John Doe".
- Email:** Input field containing "example@example.com".
- Country:** Input field containing "United States of America".
- Password:** Input field with a toggle icon (eye) to show/hide the password.

Below the form is a red "REGISTER" button. Above the form, in the top navigation bar, there are two red buttons: "SUPPORT" and "REGISTER". The "REGISTER" button is highlighted with a yellow border.


2. After successful registration, it will automatically log in the download page, and new users will get a 30-day free trial. **Please notice that you need to click to activate the 30 days trial before downloading the Pro version of Cutmate3.0, which ensures that you can succeed connect to the server when you use it.**

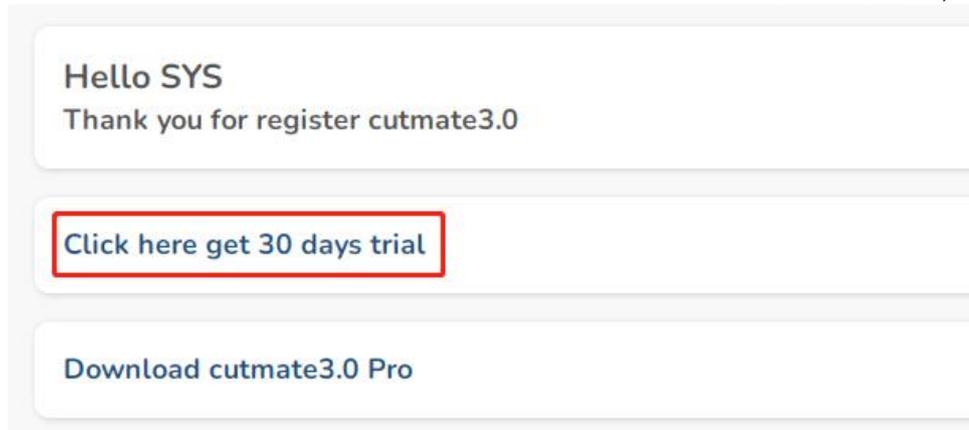


3. After downloading Cutmate3.0 Pro, double-click to open the file and start installing the software.




4. Login Cutmate 3.0, enter the email address and password which is registered on the website to get the Validate Code through the registered email, then click OK.

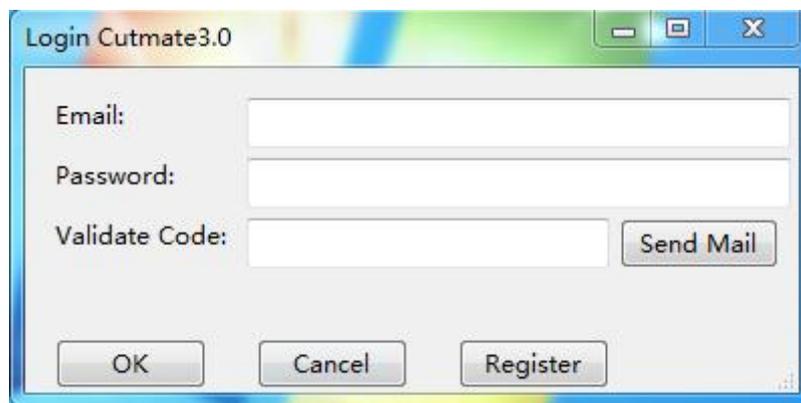


5. Fill in your username and company information (redsail), then click Next.

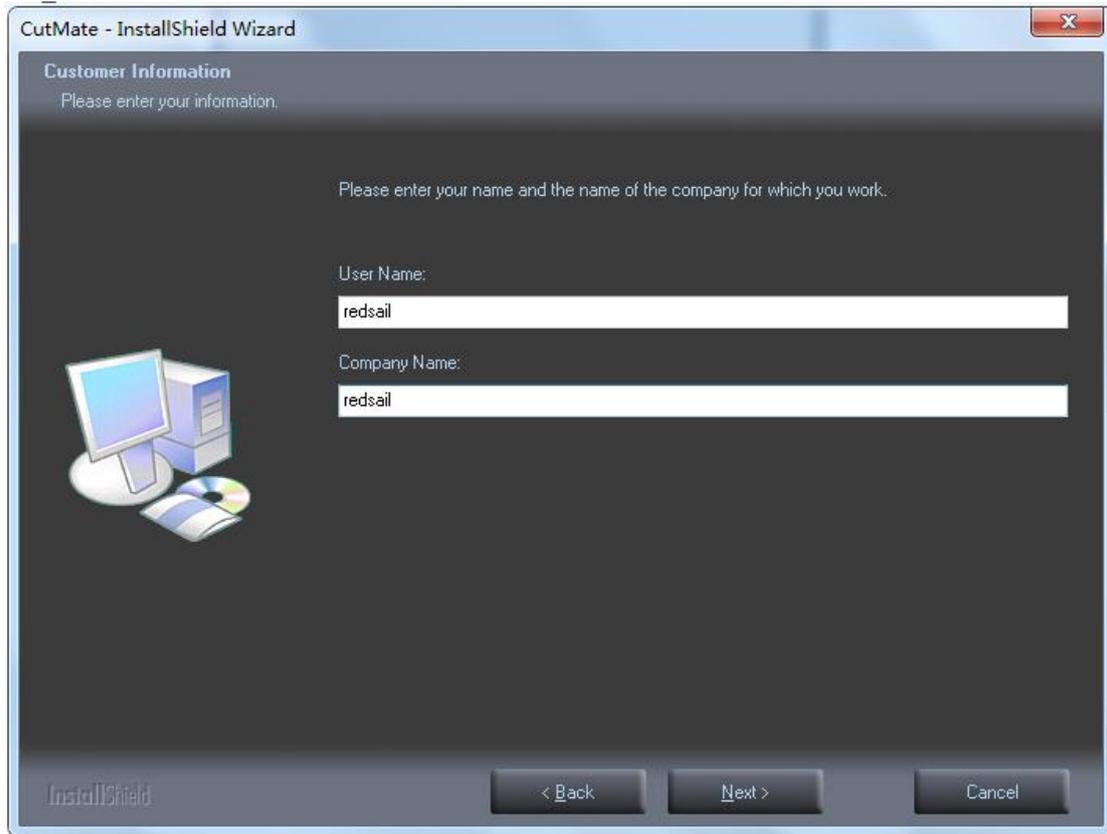


6. Select the installation location and click “Change” button to change the installation path.

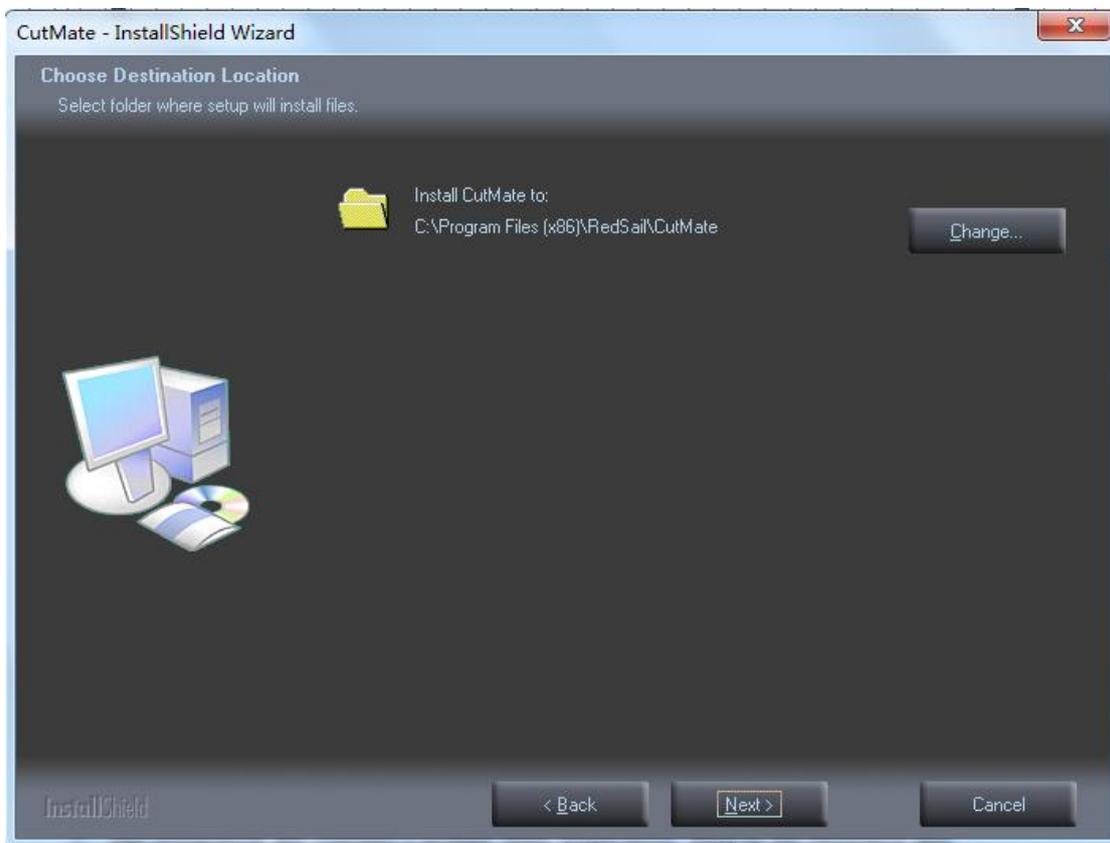


- The installation file contains CutMate Main Application, Plug-in for Illustrator and Plug-in for CorelDraw. Please select the related plug-in to install according to your needs.

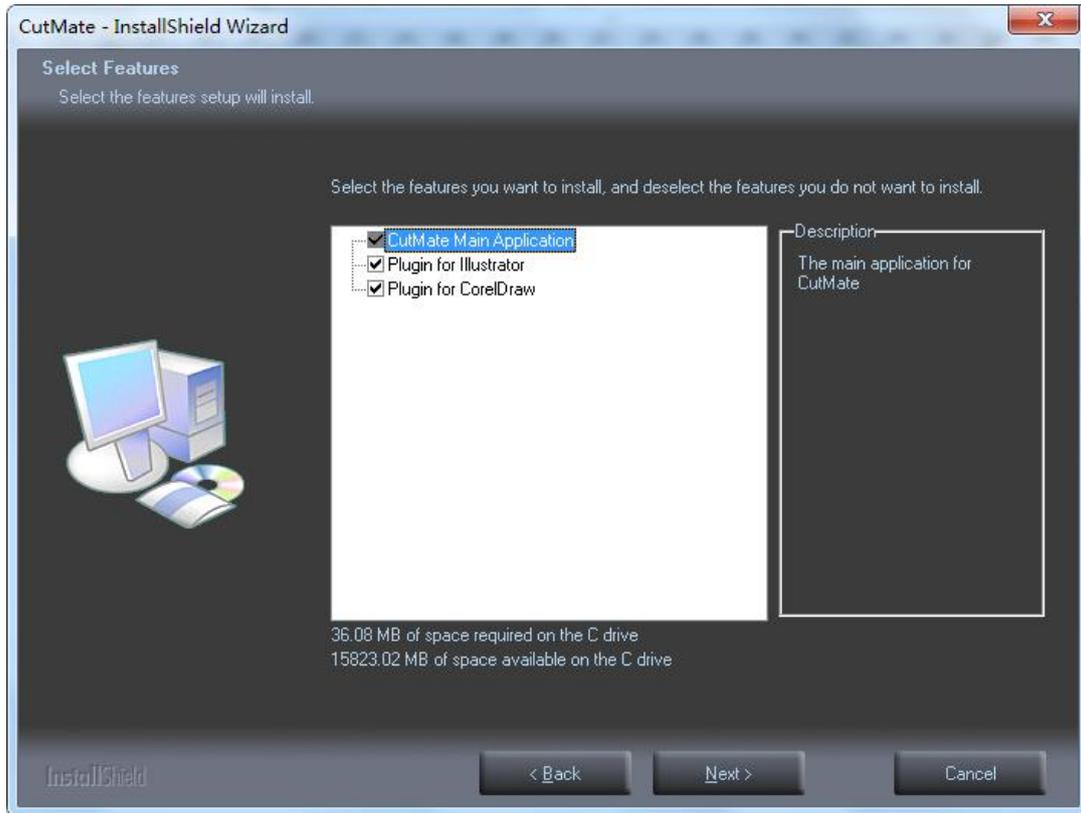

- Click "Install" to start the installation.

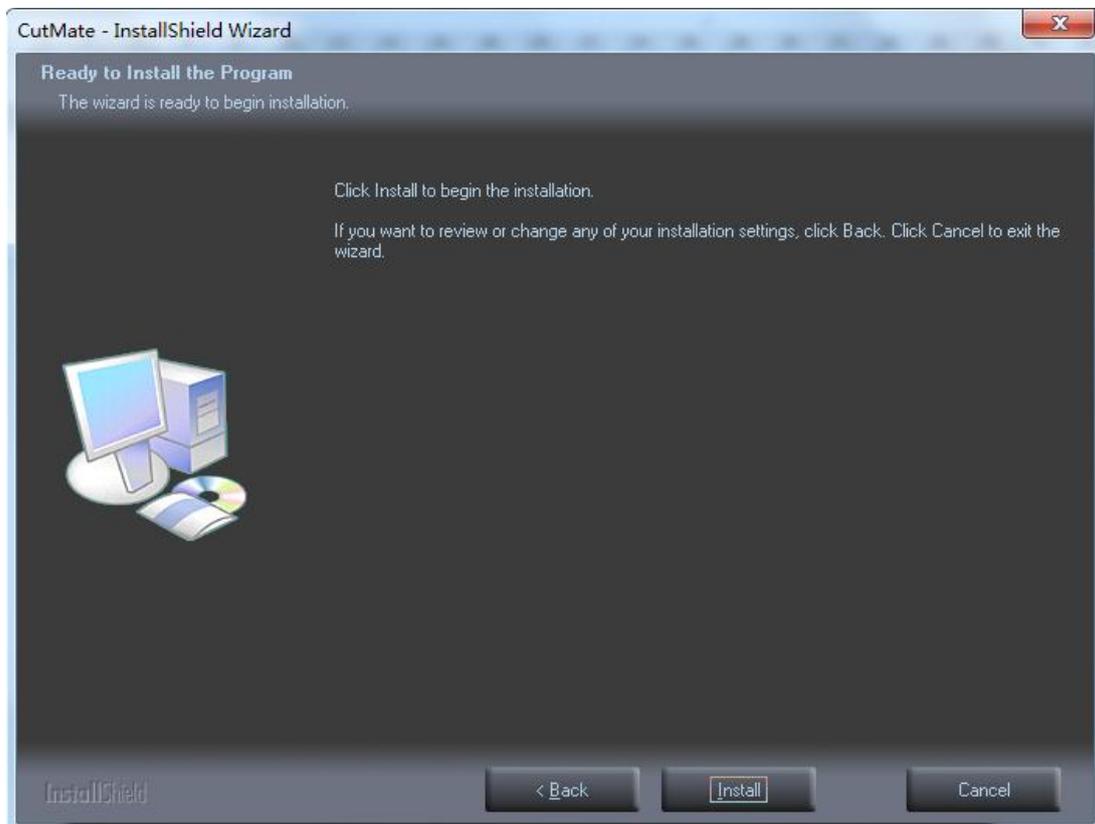

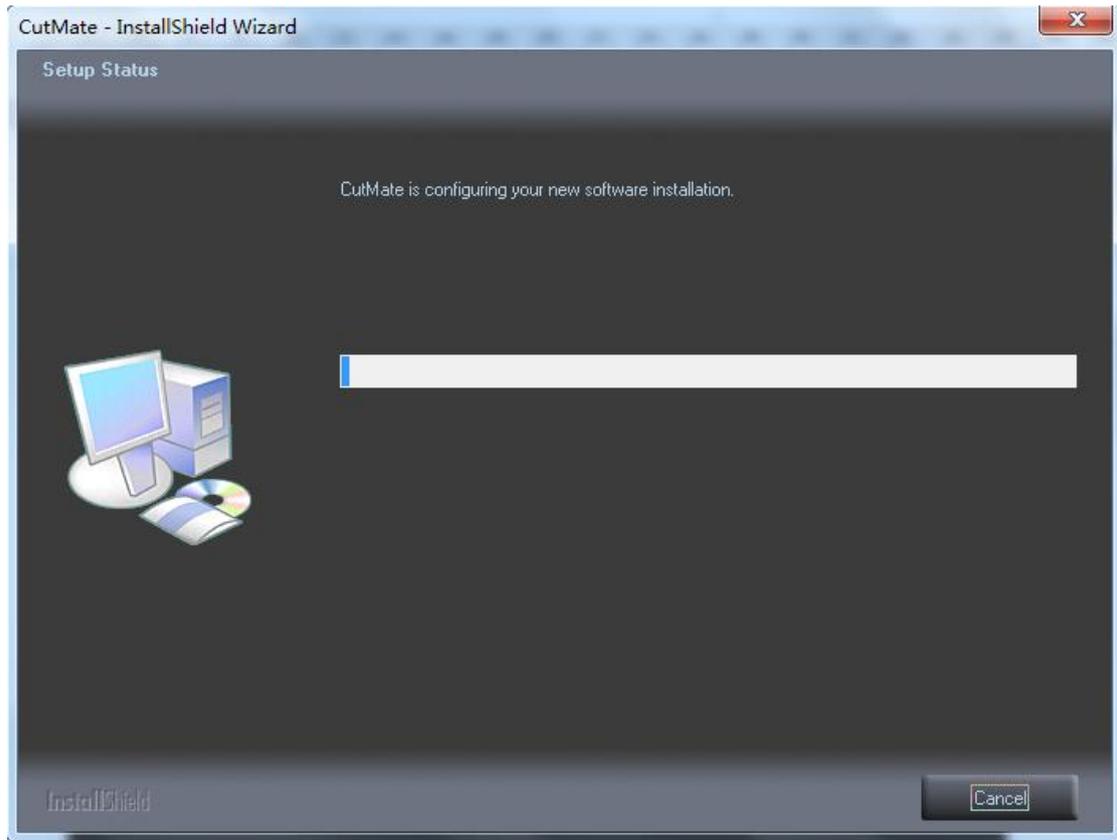

9. The CutMate shortcut will appear on the computer desktop after the installation is successful.




10. Install the CorelDraw plugin

Right-click the CutMate on the computer desktop and select <open file location>.




Open the <CorelDraw> folder in the directory

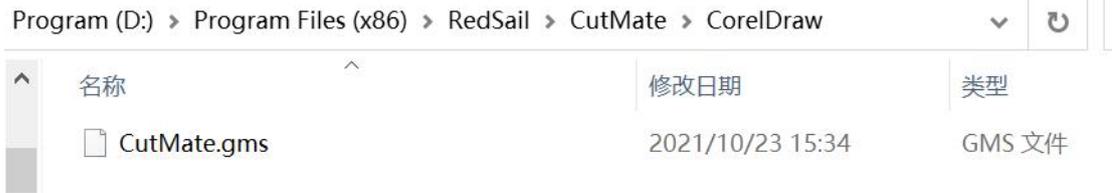


Copy the gms file to your CorelDraw plug-in directory named ..\Corel\CorelDRAW Graphics Suite **\Draw\GMS\

Run CorelDraw, the plugin will appear in the toolbar

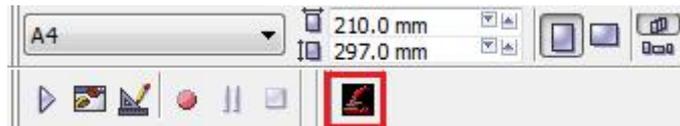

Please select Tools ->Visual Basic->Visual Basic Editor if the plugin is not loaded correctly.

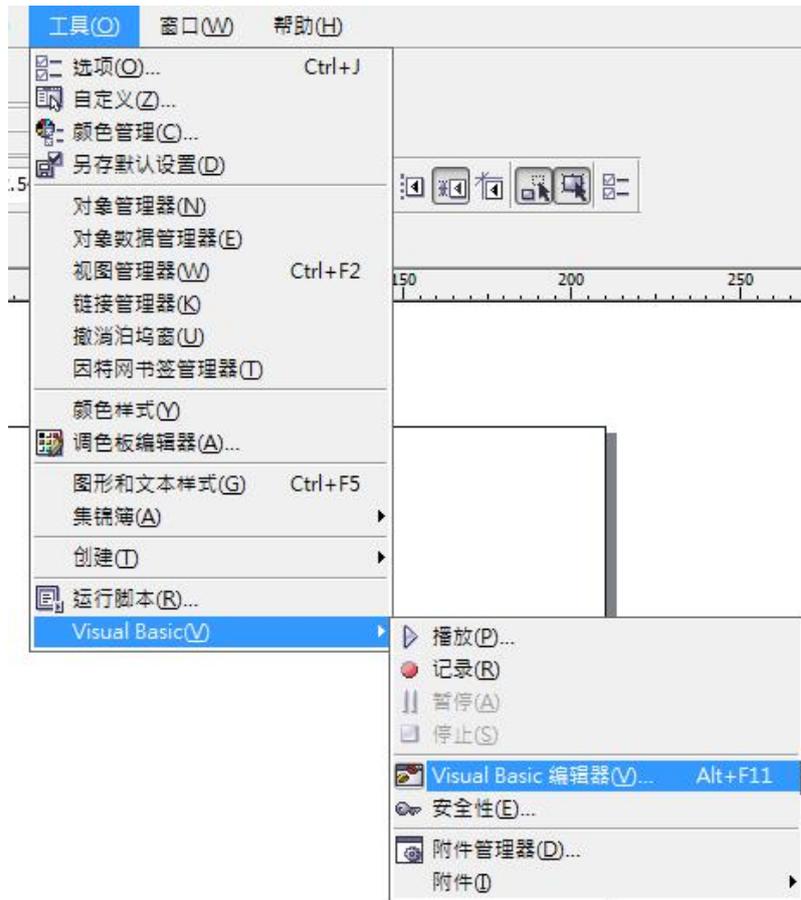


Select CutMate2,



Click the Run button on the taskbar



Click Execute and the plugin will appear in the toolbar.

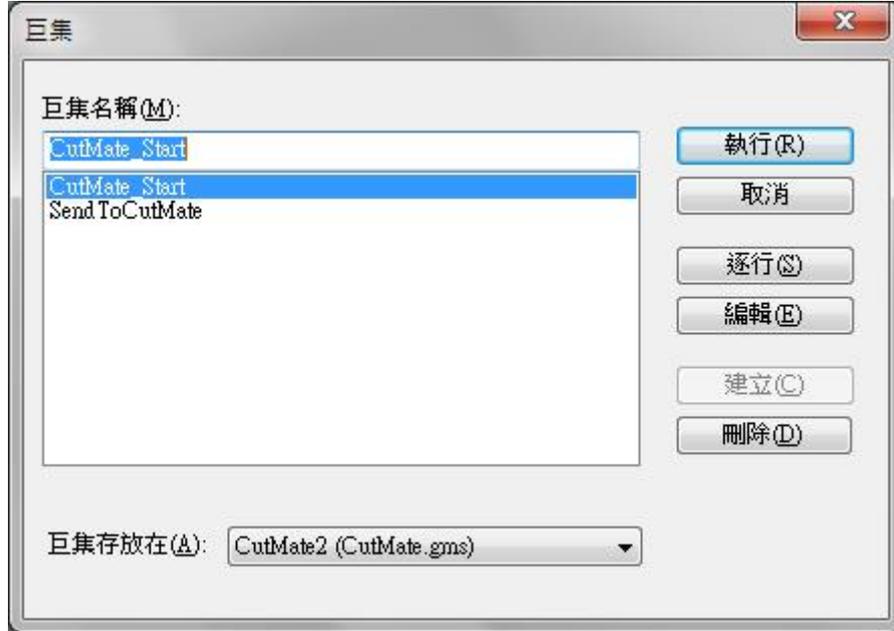


11. Install the Illustrator plugin


Right-click the CutMate on the computer desktop and select <open file location>



Open the <AI> folder in the directory

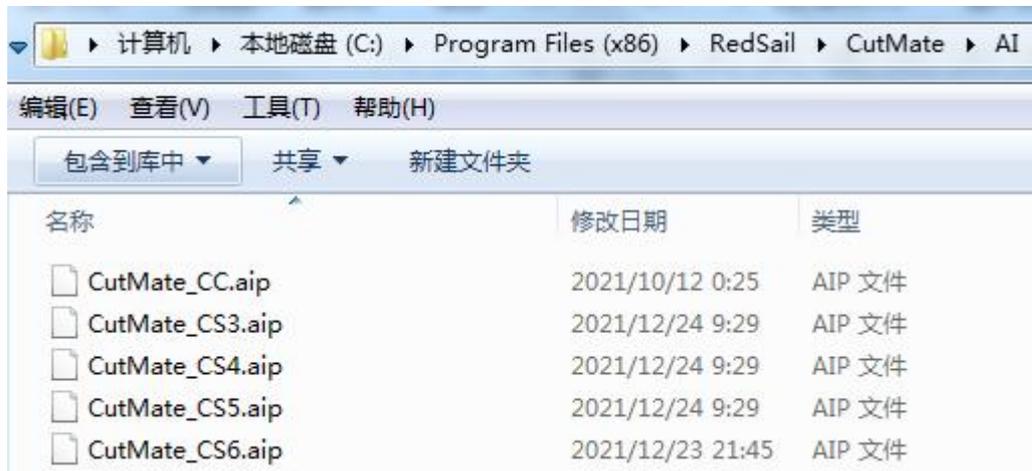

Copy the same version of the aip file as yours to your Illustrator plugin directory named ..\Adobe\Adobe Illustrator ***\Plug-ins\Tools\
 The Chinese directory is ..\Adobe\Adobe Illustrator **\增效工具\
 Run Illustrator, the plug-in will automatically appear in the toolbar

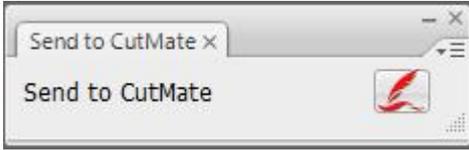

Please click [Window]->[Show CutMate Dialog] if the plug-in is not showed correctly, and the plug-in will appear.




12. Install the Inkscape plug-in

Right-click the CutMate on the computer desktop and select <open file location>




Open the <Inkscape> folder in the directory

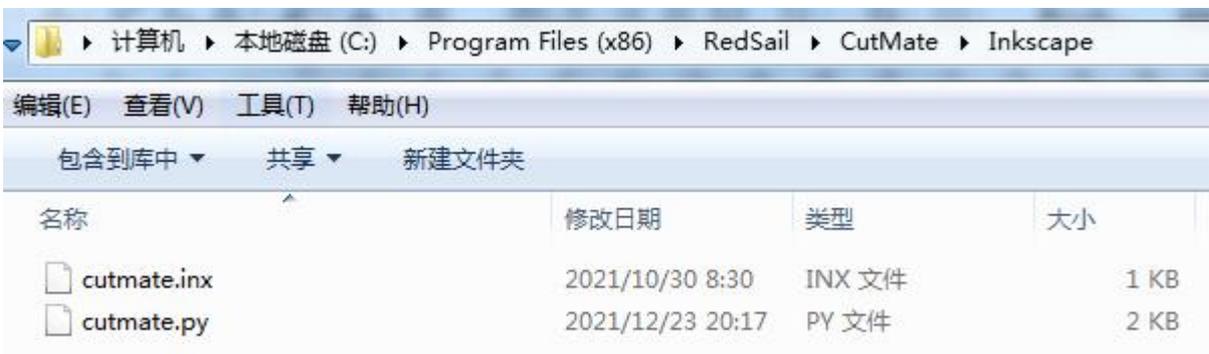

Copy the cutmate.inx and cutmate.py files to your Inkscape plugin directory named ..
 Inkscape\idir\share\inkscape\extensions


You need to install Inkscape version 1.0 or higher

Open your Inkscape, you can send your creation to cutmate at Extensions->CutMate->Send to cutmate.

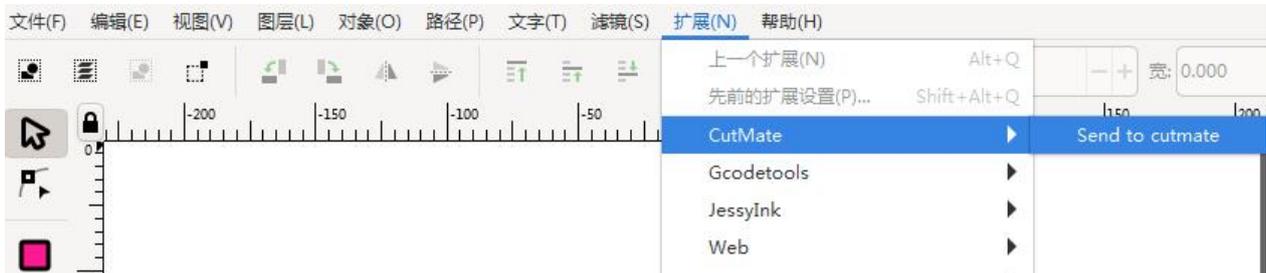

13. Cutmate Software Login


Open the software, enter the registered email, password, and the verification code sent by the mail.

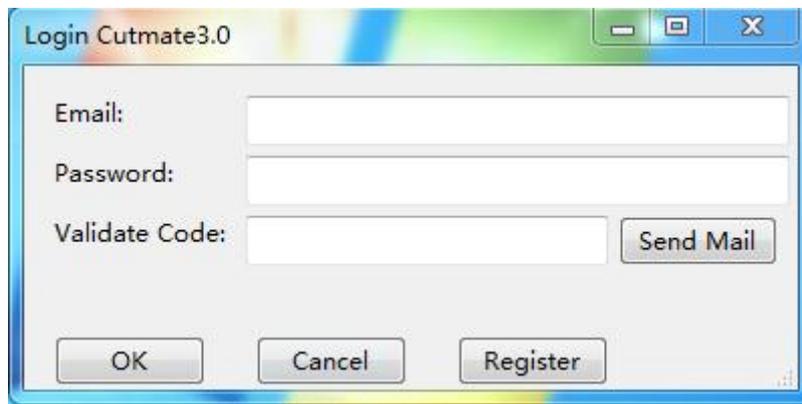


14. Setting for the Cutmate


1) Software setting

Design the graphics in Illustrator and CorelDraw, click the cutmate icon, then click OK.

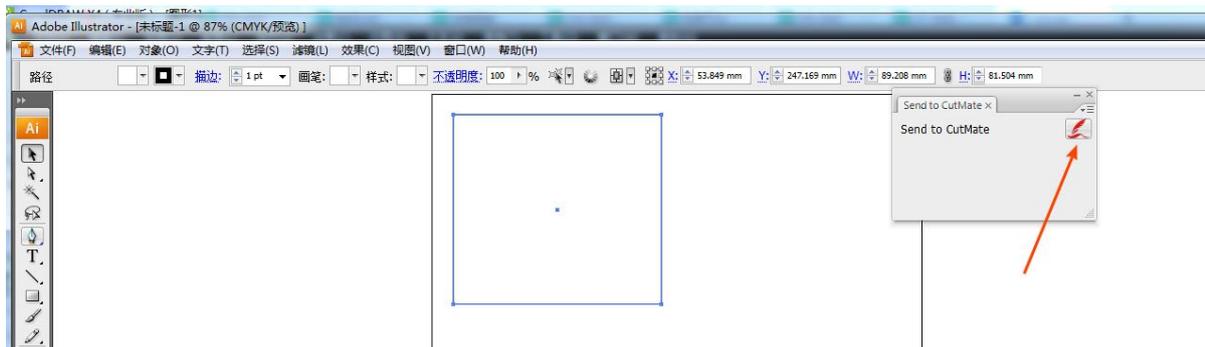


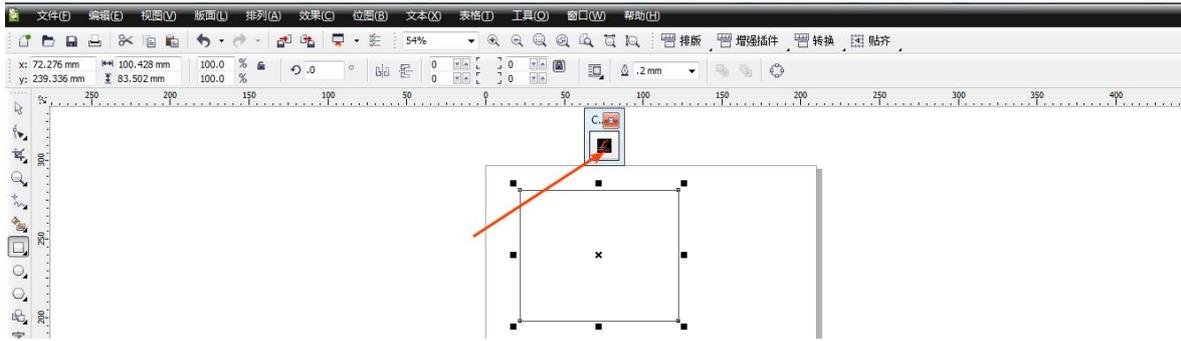


If you use Inkscape, please click on the extension- -CutMate- -Send to cutmate.

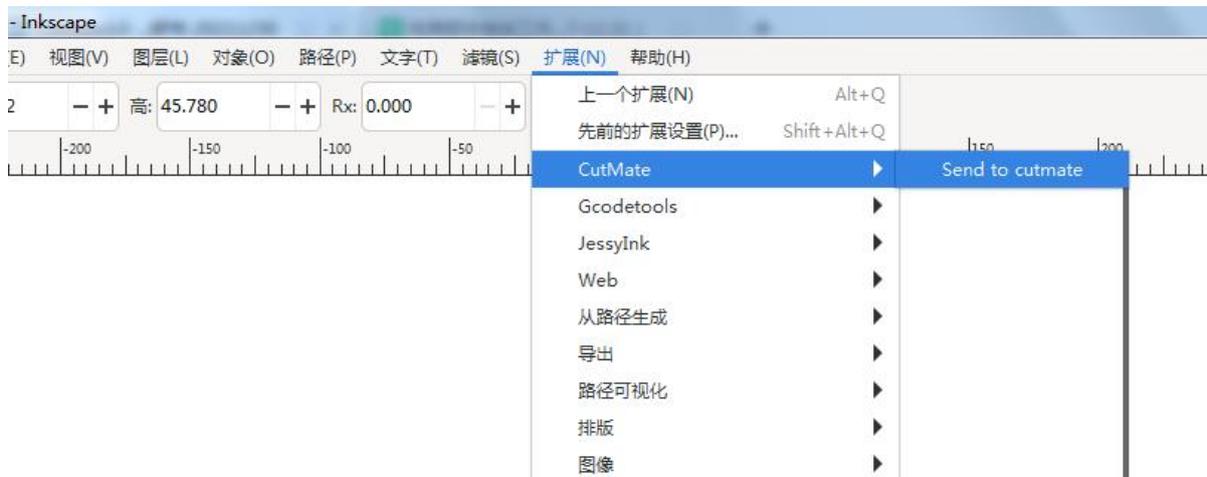


2) Connect the Cutting plotter to the computer, install the USB driver, and then click Devices.

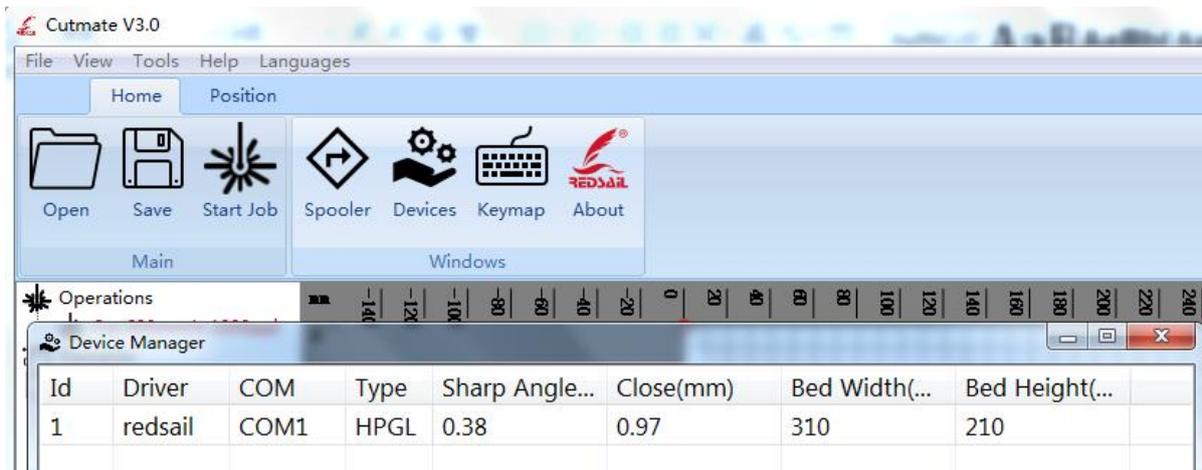


3) Double-click to open the COM, the port will be automatically identified after the connection, please click to select the corresponding port. For Type command, if your cutting plotter is with English language, please select HPGL, if it is Chinese, please select DMPL, then click ok and close the dialog box.

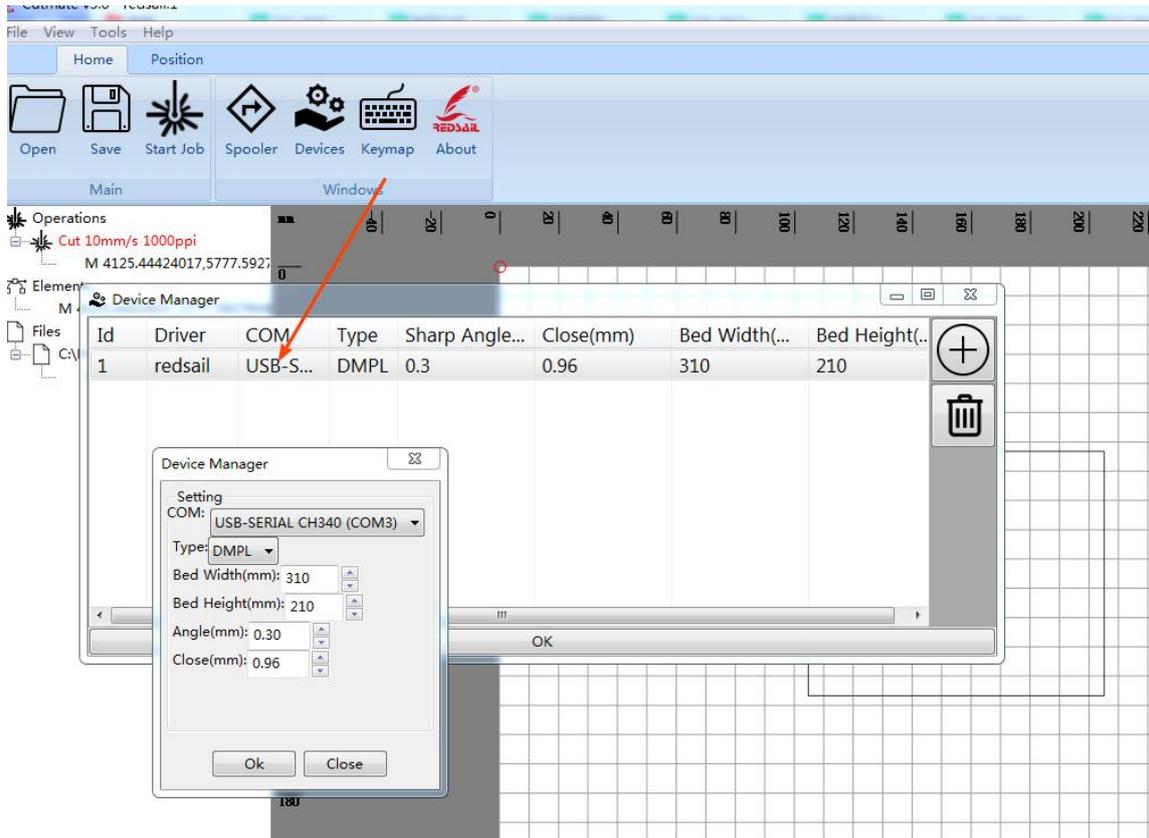


4) Click Start Job- -Execute Commands, then click Start Job again, the cutting plotter will start to work.

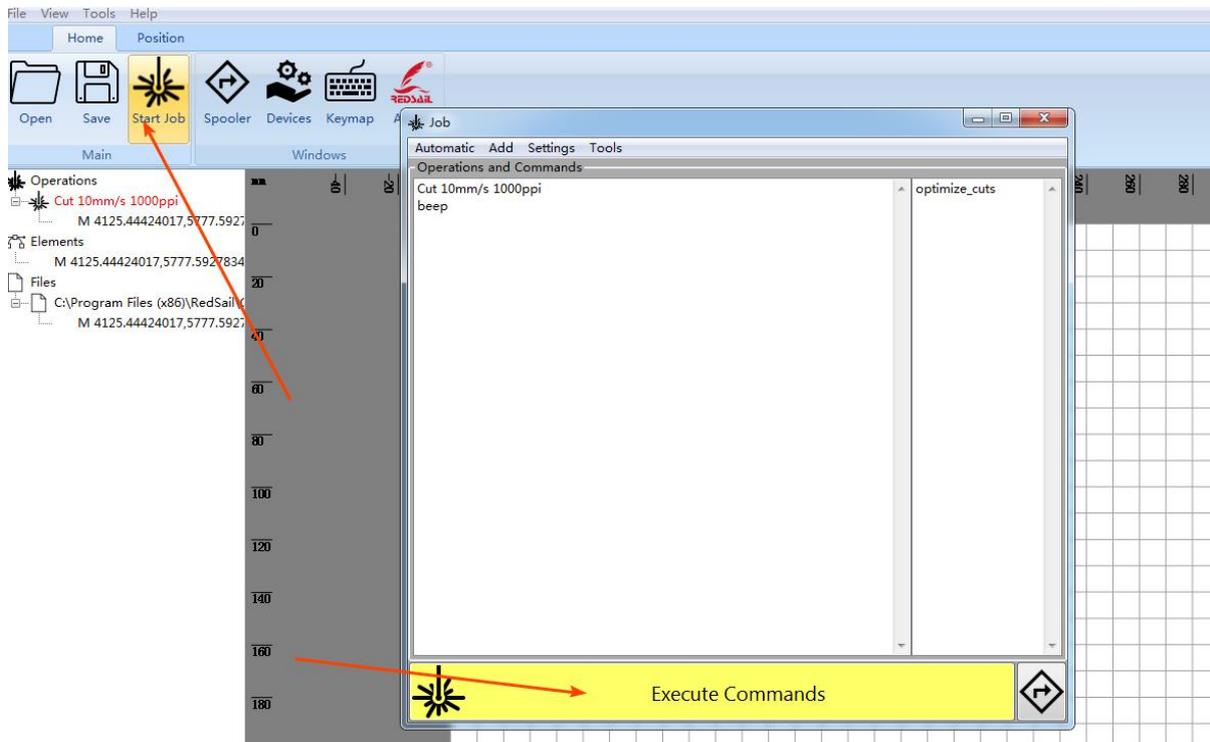


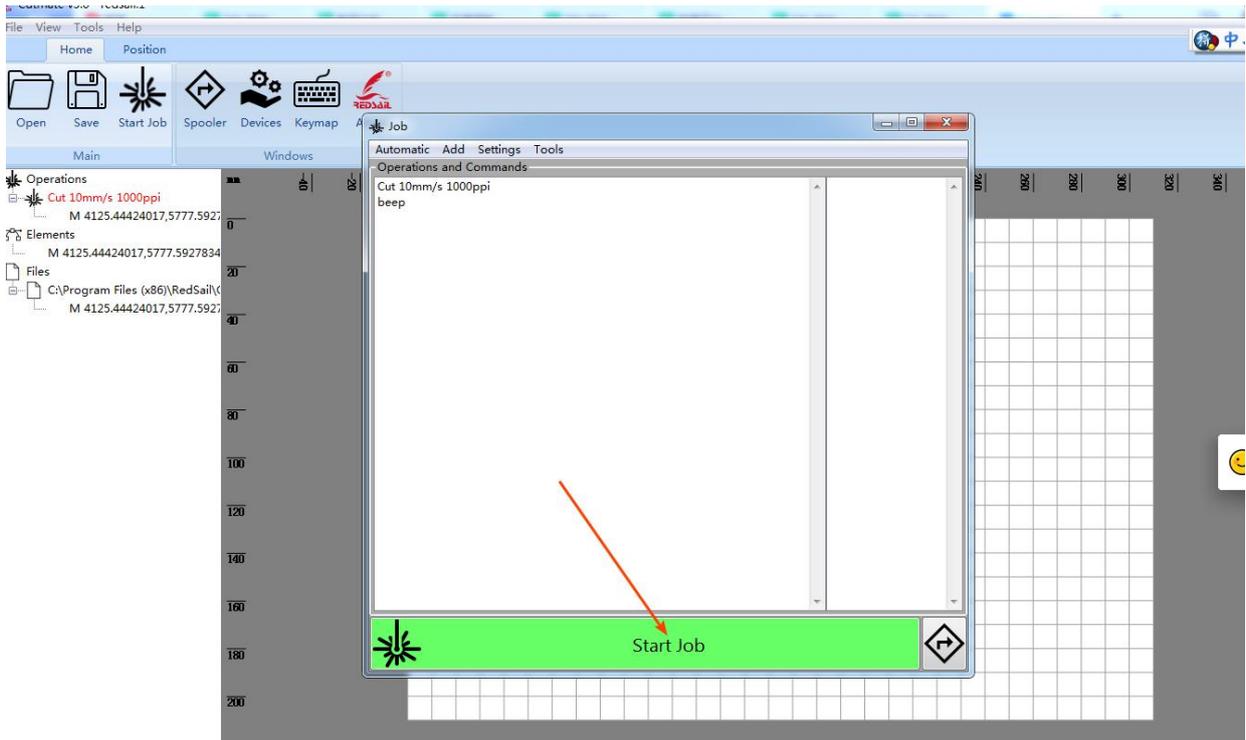


15. Introduction for the CutMate common features.


1) Language: Double-click the Cutmate icon on the desktop to open the CutMate, click to open the language, you can choose the Chinese and English language, select the language you need—close--re-open the CutMate, then the language will be that you modified.

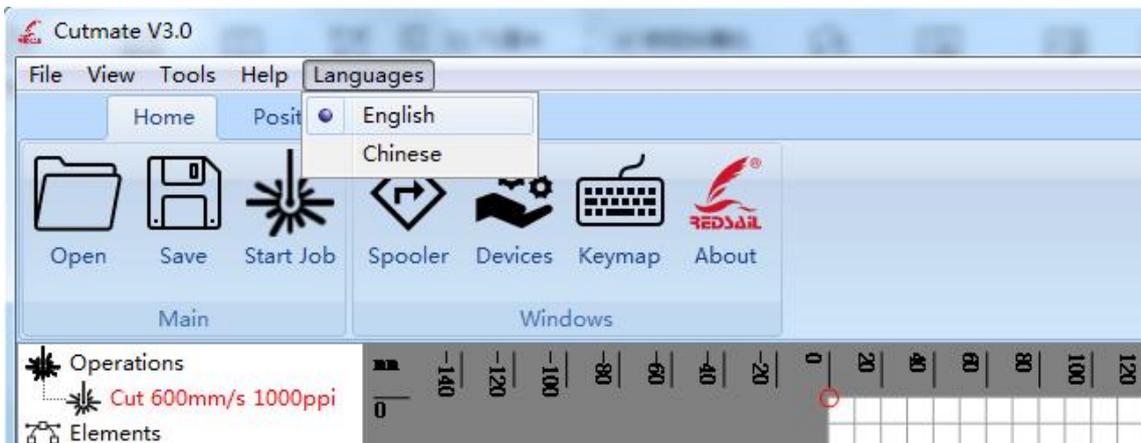


2) Open : Click it and can open SVG, DXF and PLT format file.

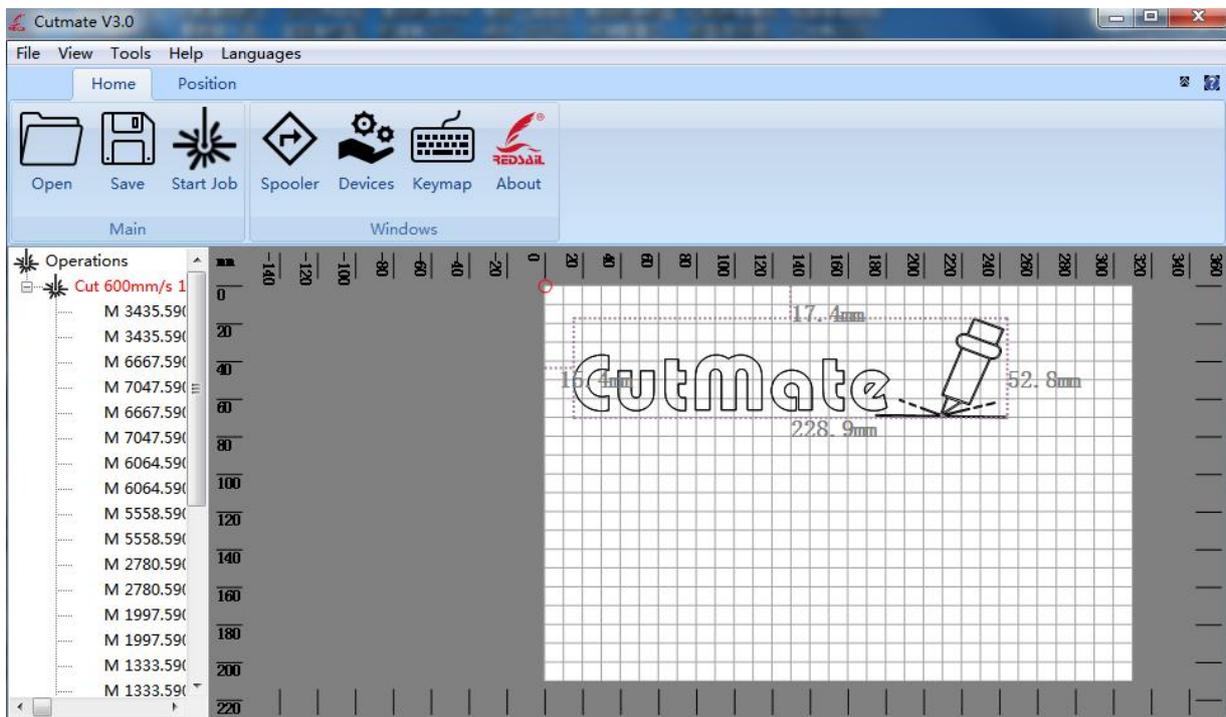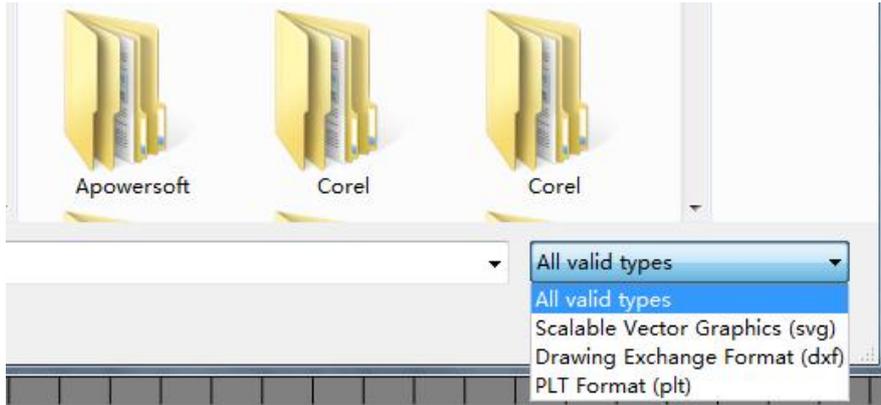

3) Save: Click Save to save the file in SVG format.

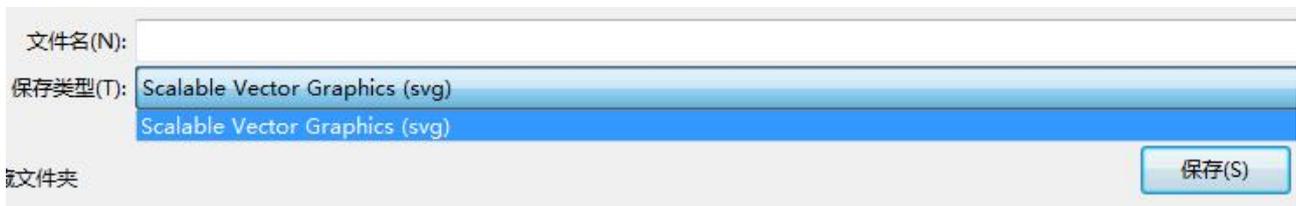

4) After selecting the figure, then right click, you can choose to remove, duplicate, scale, rotate, outline and flip.

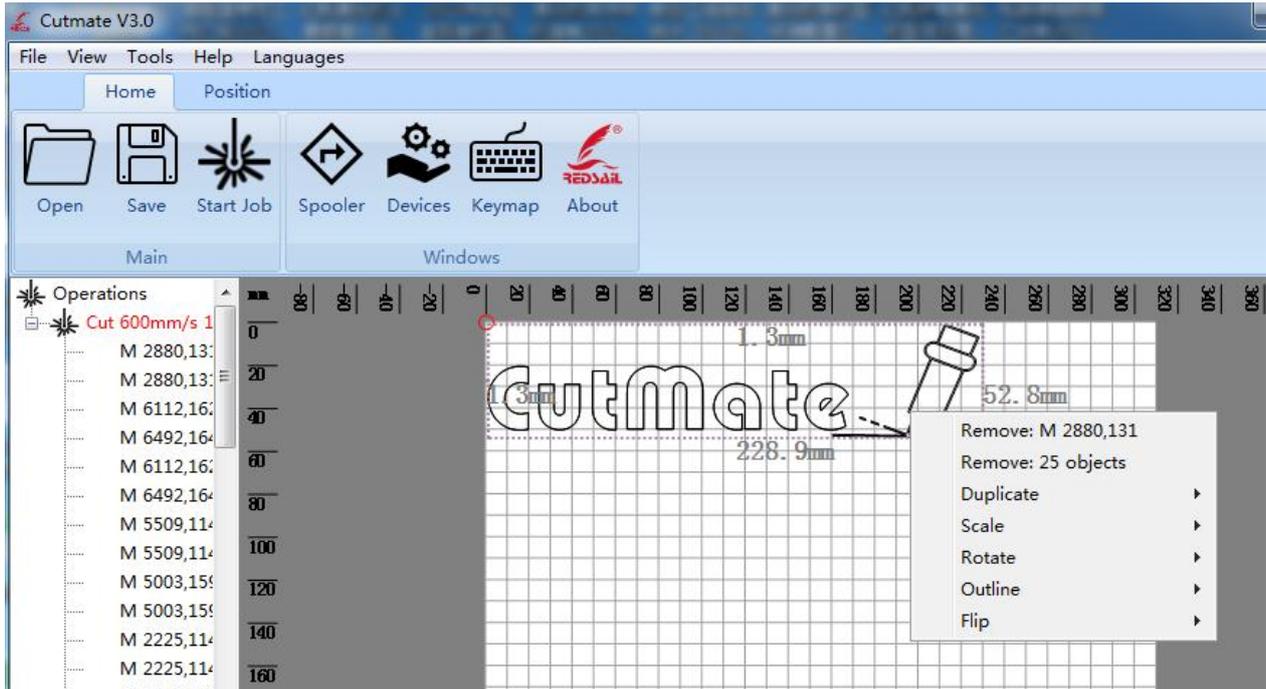

If you have any suggestions of our products or need our help, please feel free to call us at+86 531-86516855/56/57 or email us via info@cutmate.net.

Special Note: Redsail reserves the rights of changing the content and product specifications without prior notice. All the information to check carefully make sure accurate. Products are subject to change without notice.



Tel: +86-531-86516855/56/57

Fax: +86-531-86516858

E-mail: info@cutmate.net

Address: B218, F-2, Qilu Software Plaza, No.1 Shunhua Road, Jinan, Shandong, China

Website: www.easycut.cn

www.hflaser.com

Add: B218/F2, Qilu Software Plaza No.1 Shunhua Road, Jinan Hi-tech Zone, Shandong, China

ZIP: 250101

Tel: +86-531-86516855/56/57 Fax: +86-531-86516858

Email: info@cutmate.net